Waggz®

Built to impress and ready to work – equipment by and for pet groomers

WZ-979 / WZ-979-BLK
User Manual

Waggz Roll-Light Electric Grooming Table with Locking Wheels





1.TECHNICAL SPECS

WZ-979 / WZ-979-BLK			
Table Height (excluding arm)	12.6 – 40.35 in 32 – 102.5 cm	**Tabletop Size**	44 x 25.71 x 0.47 in 112 x 65.3 x 1.2 cm
Height Change Speed	0.75 in/s 1.9 cm/s	**Tabletop Material**	Wood veneer with non-slip texture
Lift Mechanism	Denmark Electric Actuator 6000N	**Power Rating**	110 – 240V Max 8A / 190W
Max Weight Capacity	265 lb 120 kg	**Product Net Weight**	163 lb 74 kg
Battery Capacity	24V / 1.3AhV Max Current: 5A	**Battery Type**	Sealed Lead Acid Battery
Plug Maximums	1500W power 12A current	**Flammability Rating**	UL94V-2

2.CONTACT INFORMATION

Thank you for your purchase! This quick-start guide will help you get the most out of your new Waggz grooming table.
If you have any questions, need replacement parts, or want to purchase additional products, just get in touch. We're here to help:

Visit 910 Canal Pl, City of Industry, CA 91746
Call 626-549-1212
Email info@waggz.com
Follow @waggzgrooming

3.GENERAL GUIDANCE

UPON ARRIVAL

Please carefully examine your grooming table and review the packing list. If you notice any missing parts or damaged components, notify Waggz immediately.
Do not attempt to disassemble the table before contacting Waggz.

CLEANING, CARE, AND MAINTENANCE

Waggz grooming tables are built to impress and ready to work. Regular cleaning and routine maintenance will keep it that way! Follow these steps to extend the life of your table and protect your Waggz 2-year warranty:

WORKING CONDITIONS

Cool-down periods: rest for 18 minutes after 2 minutes of continuous lifting and lowering
Battery charging: plug in for 6 to 8 hours to fully charge the portable battery before use
Temperature: avoid extreme cold (<40°F) and extreme heat (>104°F)
Humidity: avoid extreme dryness (<20%) and extreme humidity (>90%)
Altitude: avoid extreme altitudes (1.86 miles above sea level)
Air pressure: performs best between 700 and 1060 hPA

DAILY CLEANING

Use a damp cloth or soft brush and neutral detergent to clean the tabletop. Stains should be promptly treated with 1 part ethyl alcohol to 20 parts water, then rinse well.

QUARTERLY INSPECTION

- Complete a visual inspection of all equipment, including controls and hydraulic mechanisms
- Check the tightness and state of wear on all screws, bolts, bushings, and pins
- Check for leaks, then wipe off any lubrication residue around gas springs and pistons
- Check the stability and installation of all adjustable components
- Check the condition of wheels and remove any build-up or impediments from treads
- Check the condition and efficiency of brakes, including the brake activation lever
- Observe the lift mechanism to check for unusual sounds, vibrations, and oscillations

NON-ROUTINE MAINTENANCE

- For safety reasons and to avoid invalidating the warranty, Waggz alone must diagnose and organize action for any faults relating to the hydraulic pistons, wheel, and brake systems.
- Maintenance technicians must be familiar with the contents of this instruction booklet and may only use original Waggz parts and components.
- Always complete a full safety inspection of the table after rough handling, falls, drops, or bumps.

⚠ WARNING

- IF YOU EVER HAVE SAFETY CONCERNS ABOUT THE CONDITION OF COMPONENTS, IMMEDIATELY DISABLE THE EQUIPMENT TO PREVENT USE UNTIL SAFETY RISKS HAVE BEEN REMOVED OR RESOLVED.
- IMMEDIATELY RECORD AND REPORT ANY DEFECTS OR DAMAGES DIRECTLY TO THE MANUFACTURER.
- THE MAXIMUM WEIGHT CAPACITY OF THIS GROOMING TABLE IS 265 LBS (120 KG).
  DO NOT EXCEED THIS LIMIT. DO NOT SIT, STAND, OR CLIMB ON THE TABLE.
- ALWAYS LOWER THE TABLE TO ITS LOWEST POSITION BEFORE DRIVING A MOBILE GROOMING VAN.

4.PACKING LISTS

A



Roll-Light grooming table with 2 control pedals,
1 foot brake, 1 class II control box and inner transformer,
1 electric actuator, 1 lead acid battery, and 4 rolling casters
X1 set

B



Adjustable grooming arm
X1 set

C



Nylon grooming loop
X2 pcs

D



Spring washers
X4 pcs

E



Flat metal washers
X4 pcs

F



8x12mm screws
X4 pcs

G



Allen key
X1 pc

5.ASSEMBLY INSTRUCTIONS

STEP 1

A X1




Lift: + pedal


Lower: - pedal




STEP 2

B X1 C X2 D X4 E X4 F X4 G X1

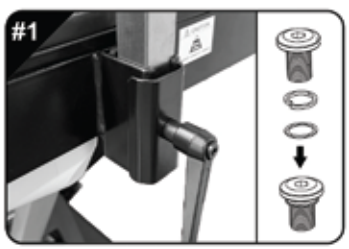

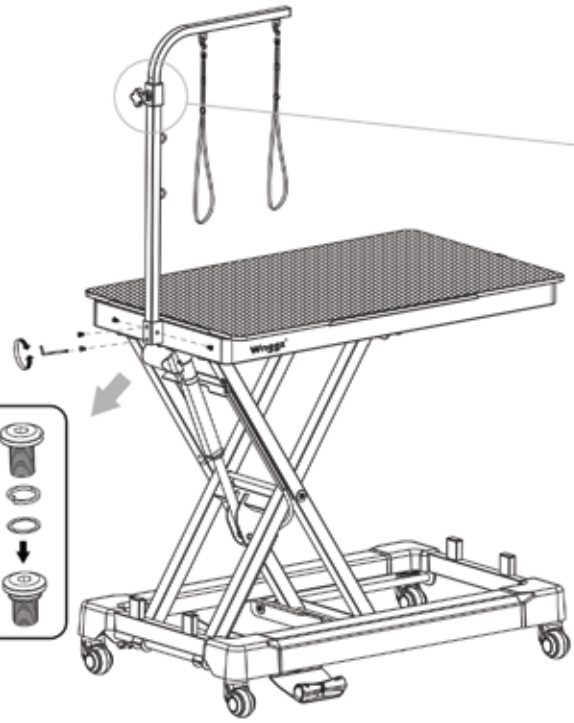

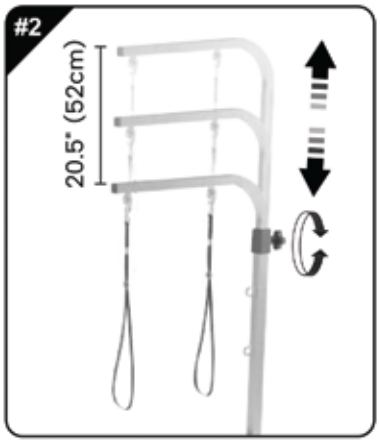


1.Using the Allen key, screws, and washers as pictured, attach the grooming arm into position on the side of the table.
2.To adjust the arm height, simply twist the knob to loosen, lift or lower into position, and twist the knob to tighten.

STEP 3





Press down to lock brake
will not move

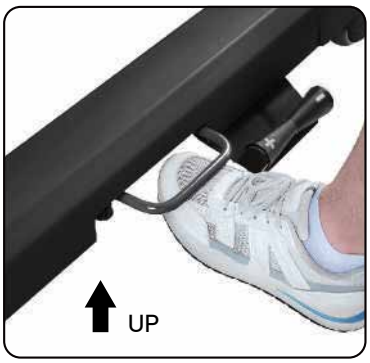

Lift to release brake
ready to roll

Safety Tips:

- 1. Measure space between the grooming arm and ceiling before raising table to full height.
- 2. Support the grooming arm with one hand while loosening the knob and adjusting height.
- 3. Look for objects and obstructions under the table before lowering or adjusting height.
- 4. Stabilize the table position and wheel placement before loading animals onto the table.

** NEVER LEAVE ANIMALS ON UNATTENDED. ALWAYS MONITOR FOR SAFETY **

6.TABLE DIMENSIONS



